

DATA SHEET - SERVICE MANUAL

APPLICATION

Directional spool valves type WEH16... electro-hydraulically operated are intended for change in direction of fluid flow in a system and thus it allows to change direction of movement of a receiver - mostly piston rod of a cylinder or hydraulic motor as well to use functions: *on* and *off*. These directional spool valves are used for subplate mounting in any position in a hydraulic system.

The directional spool valve type WEH16... is complied with the regulations of directive 2006/95/WE for the following voltages:



- 50 – 250 V for AC
- 75 – 250 V for DC

DESCRIPTION OF OPERATION



H-4WEH16E72/G24NZ4


H-4WEH16HE72/G24NZ4

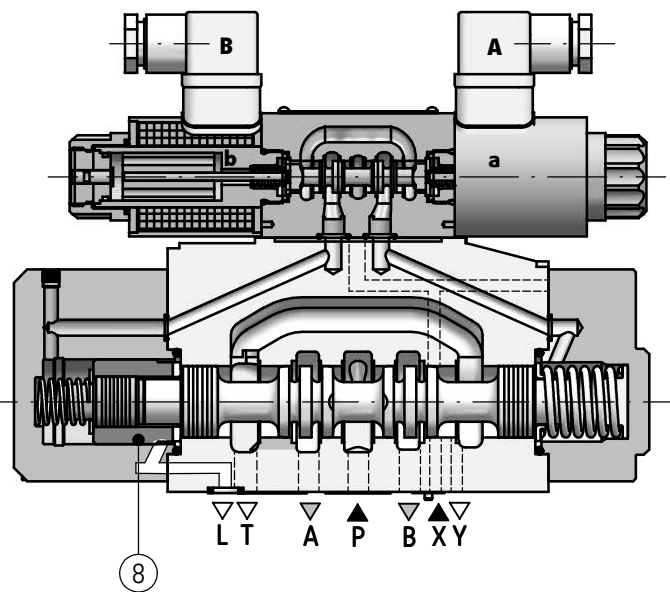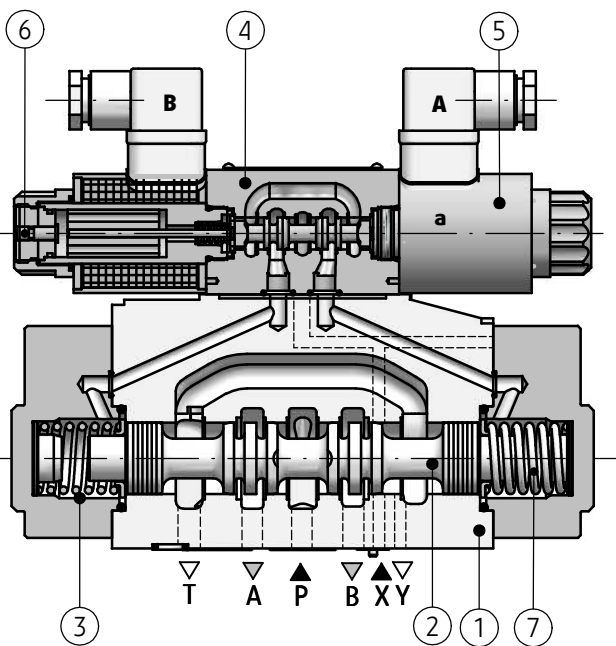

Main bore and annular ports **P, T, A, B** are made in the housing (1) and connected to its subplate connection. Directional valve is switched by shifting the spool (2) into one end position. Various control functions are dependent on the spool (2) which affects the change in configuration of connections among ports **P, T, A, B** in the housing (1). The spool (2) is shifted from its neutral position by affecting pressure of hydraulic fluid supplied via pilot valve (4) into one chamber of caps (3). The pilot valve (4) – type WE6...12/... according to data sheet WK 499 502 is operated by means of solenoids (5). In case of failure, the pilot

valve (4) may be shifted manually by means of manual overrides (6) – version ...4WEH16.../...N. The spool (2) is centered in neutral position by means of springs (7) – versions: ...4WEH16.../... or may be hydraulically operated by the fluid pressure from the pilot valve (4) – version ...4WEH16H.../... - for 3-position directional valves the centering is possible by means of the sleeve (8). Sealing of the directional valve to a subplate is secured by sealing rings. Sealing between mounting surface of the valve and subplate is assured by sealing rings.

DESCRIPTION OF OPERATION

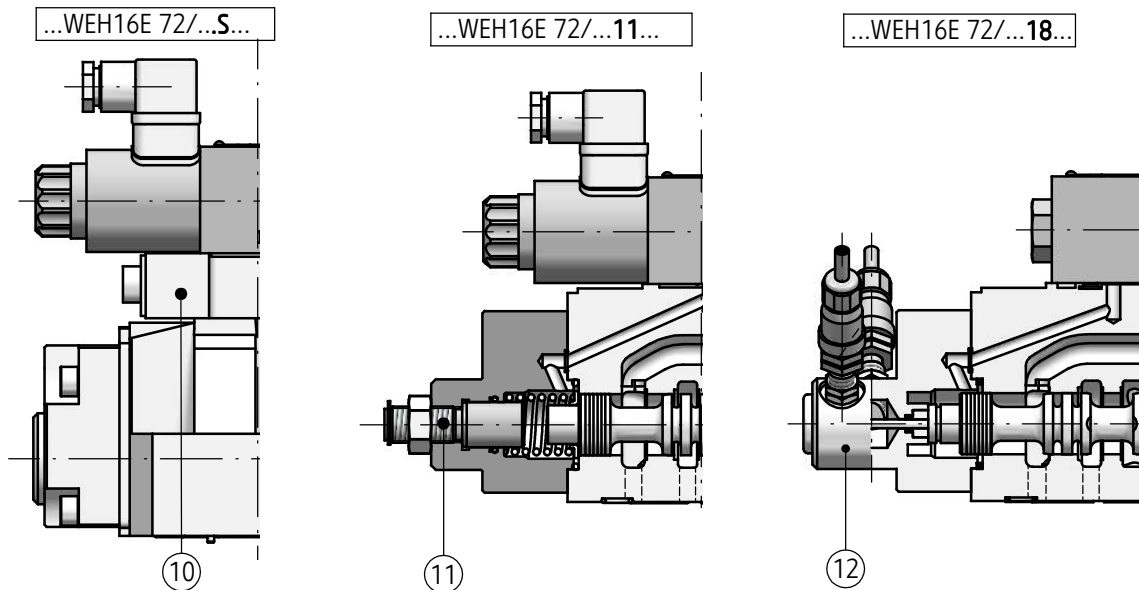

Directional spool valves may be provided with the pilot choke adjustment (10) as well as with accessories such as: spool stroke limiter (11), spool end position

monitor (12). Accessories may be mounted depending on version of directional valve like given on pages 14 – 21.

TECHNICAL DATA

Hydraulic fluid	
Hydraulic fluid	mineral oil
Required filtration	up to 16 µm
Recommended filtration	up to 10 µm
Nominal fluid viscosity	37 mm ² /s at temperature 55 °C
Viscosity range	2,8 up to 380 mm ² /s
Fluid temperature range (in a tank)	recommended 40 °C up to 55 °C
Ambient temperature range	max -20 °C up to +70 °C
	- 20 °C up to +50 °C
Max operating pressure	
<u>Ports A, B, P</u>	
• version H-4 WEH 16.../...	35 MPa
• version 4 WEH 16.../...	28 MPa
<u>Port T</u>	
• pilot fluid return Y- external	25 MPa
• pilot fluid return Y- internal	16 MPa
(2-position and 3-position directional valve spring centered only, no 3-position version hydraulically centered with Y- internal)	
Max control pressure	25 MPa
Min control pressure	
<u>Pilot fluid supply X- external</u>	
• 3-position directional valve	0,8 MPa
• 2-position directional valve spring positioned	1,0 MPa
• 2-position directional valve hydraulically positioned	0,5 MPa
<u>Pilot fluid supply X- internal</u>	
(when pre-load valve applied or when flow rate is suitably high)	
• versions 4 WEH 16... with spools G,H,F,S,T	0,45 MPa
• versions H-4 WEH 16.../...D1... with spools G,H,F,S,T	0,7 MPa

DESCRIPTION OF OPERATION

Fluid volume required to operate the valve	
<u>3-position spring centered directional valve</u>	5,75 cm ³
<u>3-position hydraulically centered directional valve</u>	
• from 0(neutral) to operated position <i>a</i>	2,85 cm ³
• from 0(neutral) to operated position <i>b</i>	5,75 cm ³
• from operated position <i>a</i> to 0(neutral) position	2,9 cm ³
• from operated position <i>b</i> to 0(neutral) position	2,3 cm ³
<u>2-position directional spool valve</u>	11,5 cm ³
Total time of spool shifting from neutral to end position	
<u>3-position spring centered directional valve</u>	
at pilot pressure	
p st = 5 MPa	50 ms
p st = 15 MPa	45 ms
p st = 25 MPa	40 ms
<u>3-position hydraulically centered directional valve</u>	
• solenoid <i>a</i> operation	
at pilot pressure	
p st = 5 MPa	40 ms
p st = 15 MPa	40 ms
p st = 25 MPa	40 ms
• solenoid <i>b</i> operation	
at pilot pressure	
p st = 5 MPa	50 ms
p st = 15 MPa	45 ms
p st = 25 MPa	40 ms
<u>2-position directional valve</u>	
at pilot pressure	
p st = 5 MPa	55 ms
p st = 15 MPa	50 ms
p st = 25 MPa	45 ms
Total time of spool shifting from end to neutral position	
<u>3-position spring centered directional valve</u>	
at pilot pressure	
p st = 5; 15; 25 MPa	40 ms
<u>3-position hydraulically centered directional valve</u>	
• solenoid <i>a</i> operation	
at pilot pressure	
p st = 5 MPa	30 ms
p st = 15 MPa	25 ms
p st = 25 MPa	20 ms
• solenoid <i>b</i> operation	
at pilot pressure	
p st = 5 MPa	40 ms
p st = 15 MPa	35 ms
p st = 25 MPa	30 ms
<u>2-position directional valve</u>	
at pilot pressure	
p st = 5 MPa	35 ms
p st = 15 MPa	30 ms
p st = 25 MPa	25 ms

TECHNICAL DATA









Pilot valve				
Type of pilot valve	4WE6 J - 12/... according to data sheet WK 499 502			
• for 3-position spring centered main directional valve	4WE6 M - 12/... according to data sheet WK 499 502			
• for 3-position hydraulically centered main directional valve	4WE6 D - 12/... or			
• for 2-position main directional valve	4WE6 D - 12/O... or			
	4WE6 D - 12/OF... according to data sheet WK 499 502			
Nominal supply voltage for solenoids	DC			AC (plug-in connector with rectifier)
	12V	24V	110V	230V - 50Hz 110V - 50Hz
Supply voltage tolerance	±10%			
Power requirement (DC)	30 W			
Insulation	IP 65			
Temperature of solenoid coil	max 150 °C			
Inductive spool position sensors				
Type of sensors	two PNP inductive proximity sensors: normally closed - NC (contact breaker) + normally opened - NO (contact maker)			
Supply voltage	10 - 30V DC			
Max load current	200 mA			
Connection type of sensor	sensor with M12x1 external thread, male connection			
Connection type of conductor	plug with M12 x 1 internal thread, female plug configuration of connection according to PN-EN-61076 -2-101			
External diameter of conductor	φ 2,5 - 6,5 mm (PG7)			
Insulation	IP 68			
Weight	max 10,5 kg			

ASSEMBLY AND APPLICATION REQUIREMENTS

1. Only valve working properly and suitably installed may be connected to an electric system. Only skilled workers are allowed to connect and disconnect electric system.
2. Ground connection (\perp) must be connected with protective earth wire (PE \perp) in supply system according to appropriate instructions.
3. It is forbidden to apply directional spool valve if the supply cable in the gland of plug-in-connector is not properly tightened.
4. It is forbidden to apply directional spool valve if the plug-in-connector is not properly tightened to the solenoid socket and is not secured by screwing bolt tightly.
5. Due to heating solenoid coils, directional spool valves should be placed in order to eliminate the possibility of incidental touch while using, or, they should be equipped with the coil covers (in accordance with the European standards PN - EN ISO 13732-1 and PN - EN 982).

SCHEMES


Simplified and detailed hydraulic schemes for 3-position directional valves with various pilot supply (X) and pilot drain (Y)
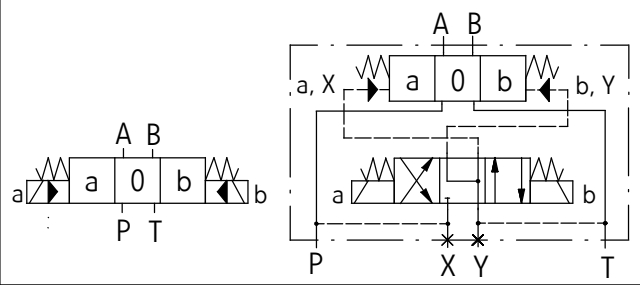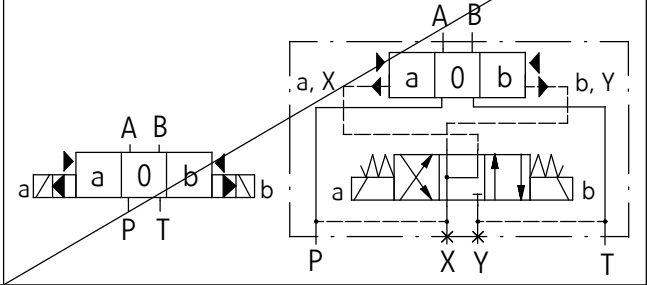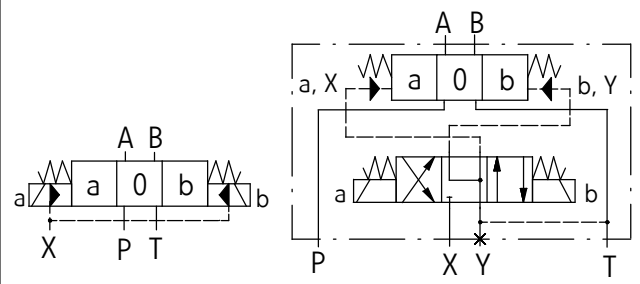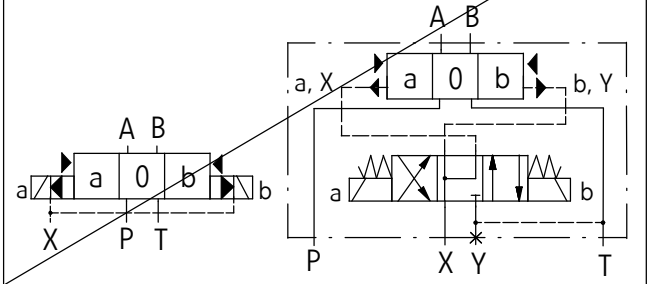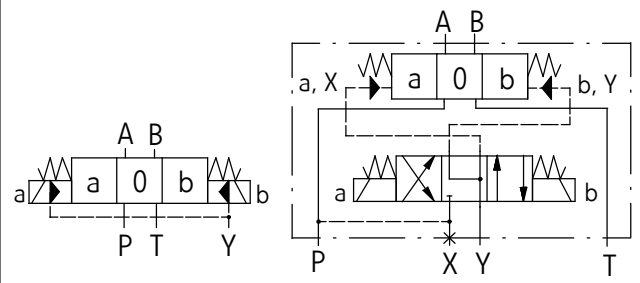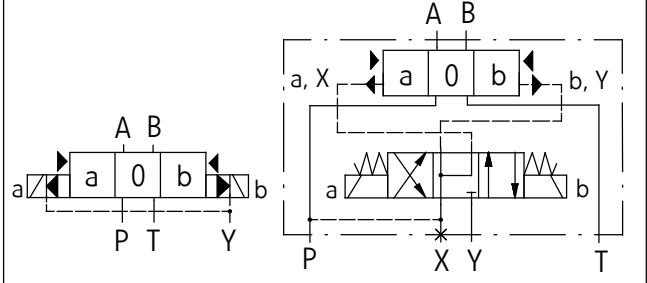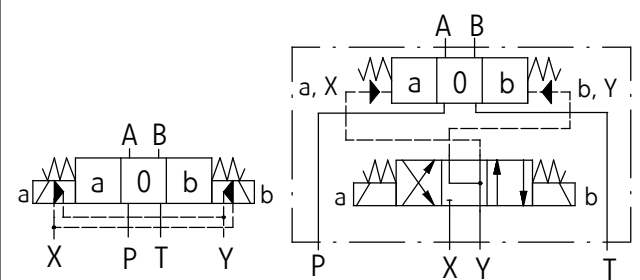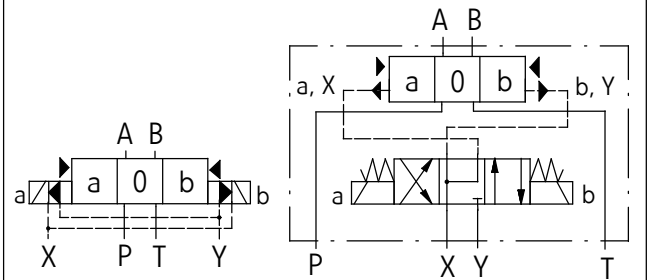
<p>3-position directional valves with spring centered spool at 0 position in main valve and pilot valve version ...4WEH16.../...</p>	<p>3-position directional valves with hydraulically centered spool at 0 position in main valve and spring centered spool in pilot valve version ...4WEH16H.../...</p>
<p>internal supply X ; internal drain Y version ...4WEH16.../...ET...</p> 	<p>internal supply X ; internal drain Y version ...4WEH16H.../...ET...- impossible</p> 
<p>external supply X ; internal drain Y version ...4WEH16.../...T...</p> 	<p>external supply X ; internal drain Y version ...4WEH16H.../...T...- impossible</p> 
<p>internal supply X ; external drain Y version ...4WEH16.../...E...</p> 	<p>internal supply X ; external drain Y version ...4WEH16H.../...E...</p> 
<p>external supply X ; external drain Y version...4WEH16.../...</p> 	<p>external supply X ; external drain Y version ...4WEH16H.../...</p> 








SCHEMES

Simplified and detailed hydraulic schemes for 2-position directional valves with various pilot supply (X) and pilot drain (Y)

2-position directional valves with spring positioned spool in main valve and pilot valve
version ...4WEH16.../...

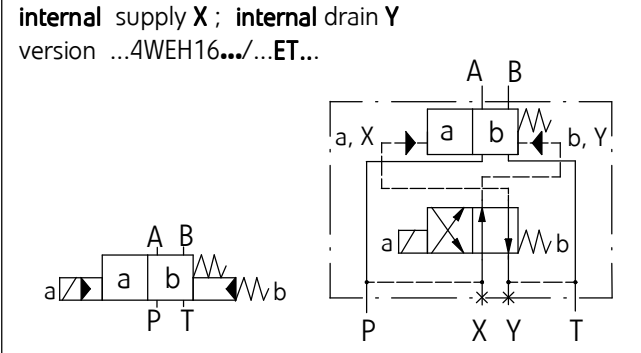

2-position directional valves with hydraulically positioned spool in main valve and spring positioned spool in pilot valve
version ...4WEH16H.../...

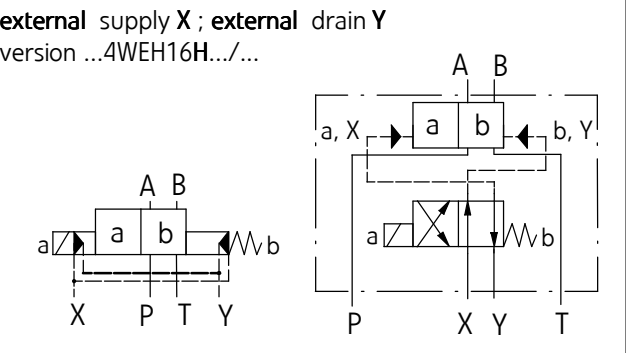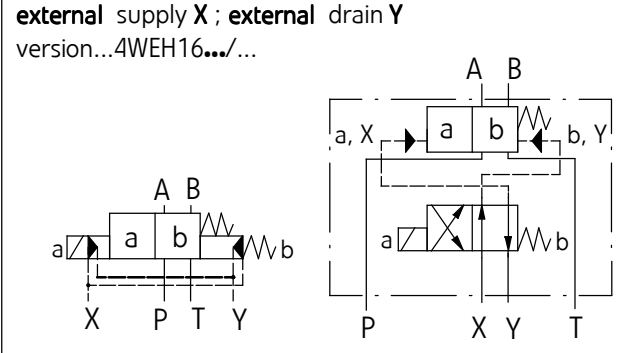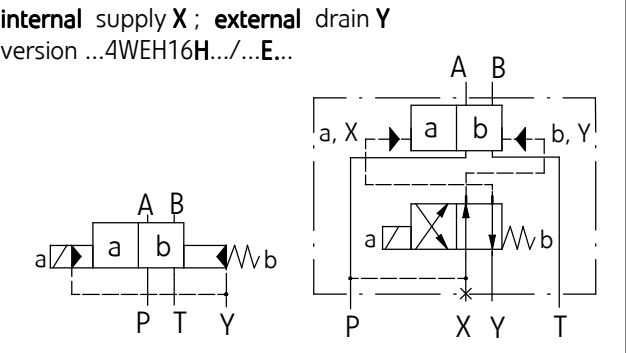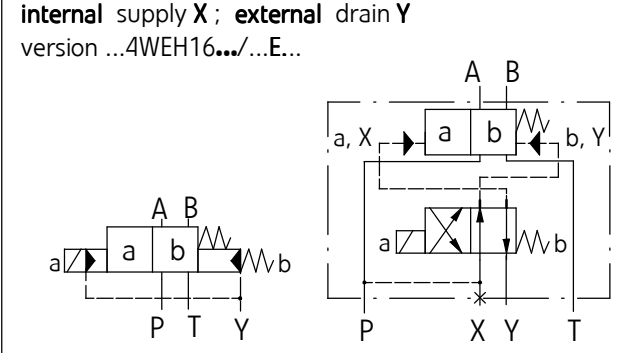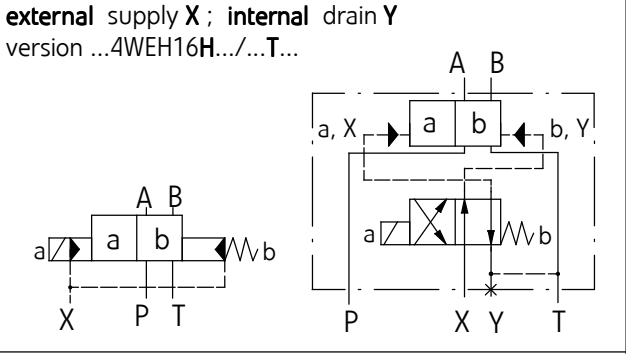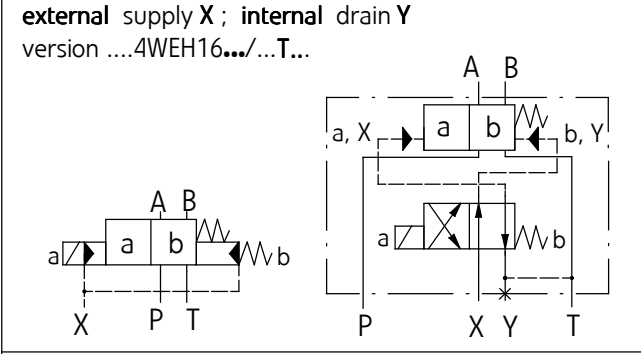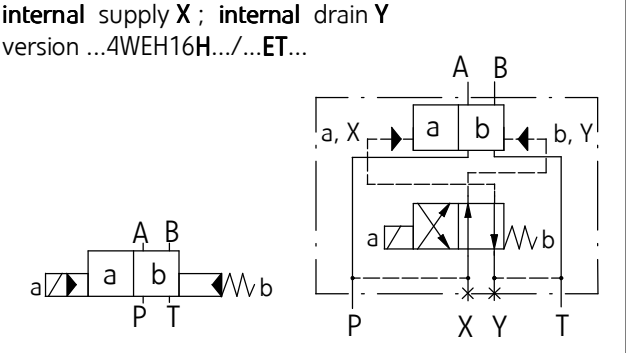

SCHEMES

Simplified and detailed hydraulic schemes for 2-position directional valves with various pilot supply (X) and pilot drain (Y)












<p>2-position directional valves with hydraulically positioned spool in main valve, pilot valve without return spring version ...4WEH16H.../O...</p>	<p>2-position directional valves with hydraulically positioned spool in main valve, pilot valve without return spring, with detent version ...4WEH16H.../OF...</p>
<p>internal supply X ; internal drain Y version ...4WEH16H.../O...ET...</p> <p>The diagram shows a 2-position directional valve with a pilot valve. The main valve has ports A, B, P, and T. The pilot valve has ports a, b, X, Y, and T. In the first position, flow goes from P to A and B to T. In the second position, flow goes from P to B and A to T. The pilot valve is controlled by X and has an internal drain to Y.</p>	<p>internal supply X ; internal drain Y version ...4WEH16H.../OF...ET...</p> <p>The diagram is similar to the previous one but includes a detent mechanism on the pilot valve, represented by a spring symbol.</p>
<p>external supply X ; internal drain Y version ...4WEH16H.../O...T...</p> <p>The diagram shows the main valve with an external supply X connected to port a of the pilot valve. The pilot valve has an internal drain to Y.</p>	<p>external supply X ; internal drain Y version ...4WEH16H.../OF...T...</p> <p>The diagram is similar to the previous one but includes a detent mechanism on the pilot valve.</p>
<p>internal supply X ; external drain Y version ...4WEH16H.../O...E...</p> <p>The diagram shows the main valve with an internal supply X and an external drain Y connected to port b of the pilot valve.</p>	<p>internal supply X ; external drain Y version ...4WEH16H.../OF...E...</p> <p>The diagram is similar to the previous one but includes a detent mechanism on the pilot valve.</p>
<p>external supply X ; external drain Y version...4WEH16H.../O...</p> <p>The diagram shows the main valve with an external supply X connected to port a and an external drain Y connected to port b of the pilot valve.</p>	<p>external supply X ; external drain Y version ...4WEH16H.../OF...</p> <p>The diagram is similar to the previous one but includes a detent mechanism on the pilot valve.</p>

SCHEMES













Graphic symbols for spools

3-position

working and indirect positions




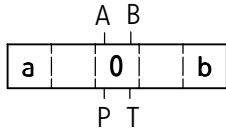


working positions





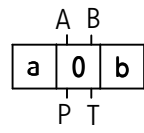


2-position

working and indirect positions




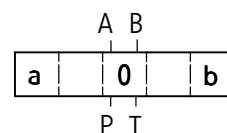


working positions



OVERALL AND CONNECTION DIMENSIONS





3-position standard versions ..4WEH16...7X/...S...D1...

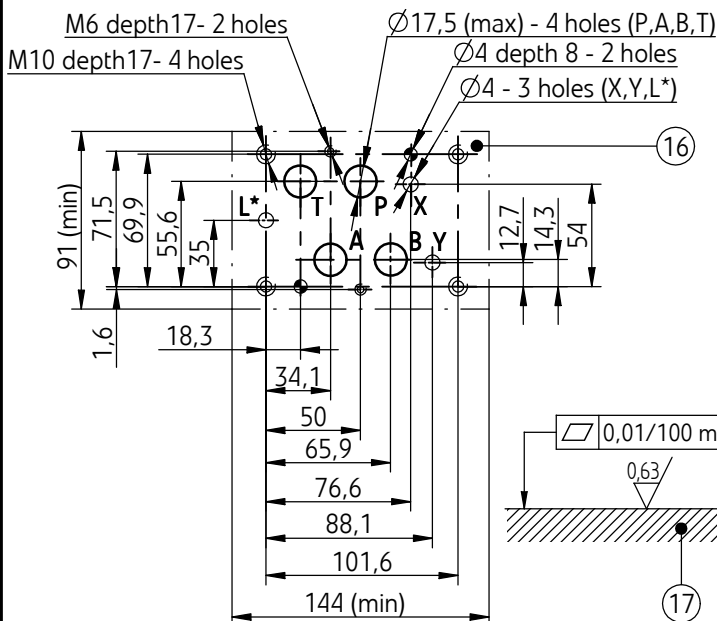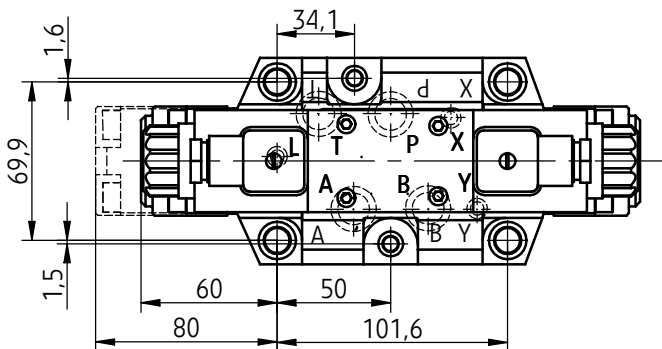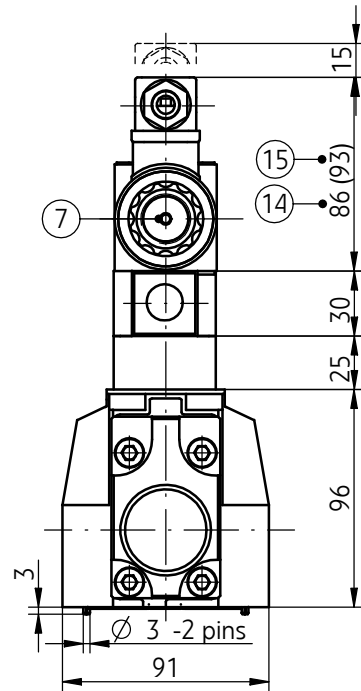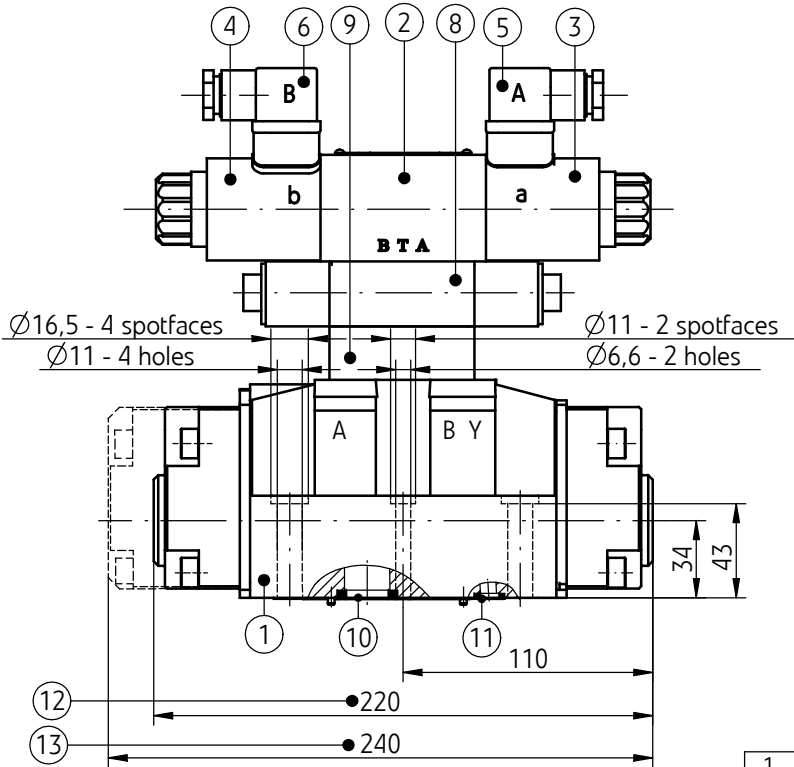

- 1 - 3-position main directional valve (spool schemes: **E, F, G, H, J, L, M, P, Q, R, U, V, W** - on page 8)
- 2 - 3-position directional valve (pilot valve) type **WE6...12/...** according to data sheet WK 499 502 (spool types according to technical data on page 4)
- 3 - Solenoid **a**
- 4 - Solenoid **b**
- 5 - Plug-in-connector **A** - ISO 4400 (DIN 43650 - A)
- 6 - Plug-in-connector **B** - ISO 4400 (DIN 43650 - A)
- 7 - Manual override
- 8 - Pilot choke adjustment (optional accessories)
- 9 - Pressure ratio valve (optional accessories)
- 10 - Square cross-section sealing ring **22,5 x 2,1** - 4 pcs/kit (P,T,A,B)
- 11 - Square cross-section sealing ring **10 x 2** -3 pcs/kit (X,Y,L)
- 12 - Dimension for directional valve with the spool position **0** (neutral) **spring centered** (version ...4WEH16...7X/...)
- 13 - Dimension for directional valve with the spool position **0** (neutral) **hydraulically centered** (version ...4WEH16H...7X/...)
- 14 - Dimension for electrical connection for DC
- 15 - Dimension for electrical connection for AC (plug-in-connector with rectifier)
- 16 - Porting pattern - configuration of surface holes in subplate in accordance with the following standards:
 - CETOP RP 121H - identified by CETOP 4.2-4-07 (nominal size CETOP 07)
 - ISO 4401 - identified by ISO 4401-07-06-0-94 mounting bolts in accordance with PN -EN ISO 4762
- M10 x 60 - 10.9** - 4 pcs/kit
tightening torque **Md = 62 Nm**
- M6 x 60 - 10.9** - 2 pcs/kit
tightening torque **Md = 12,5 Nm**
- NOTE:**
- (*) - only for 3-position versions with **0** (neutral) position of the spool hydraulically centered
- 17 - Subplate surface required

OVERALL AND CONNECTION DIMENSIONS

2-position standard versions ..4WEH16...7X/...S...D...

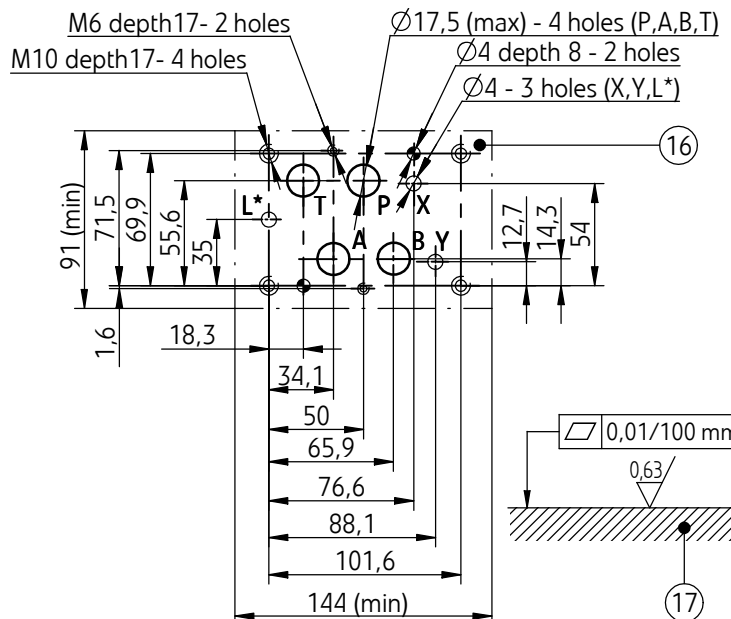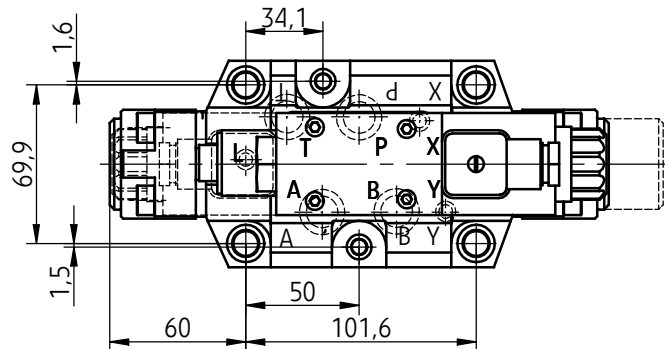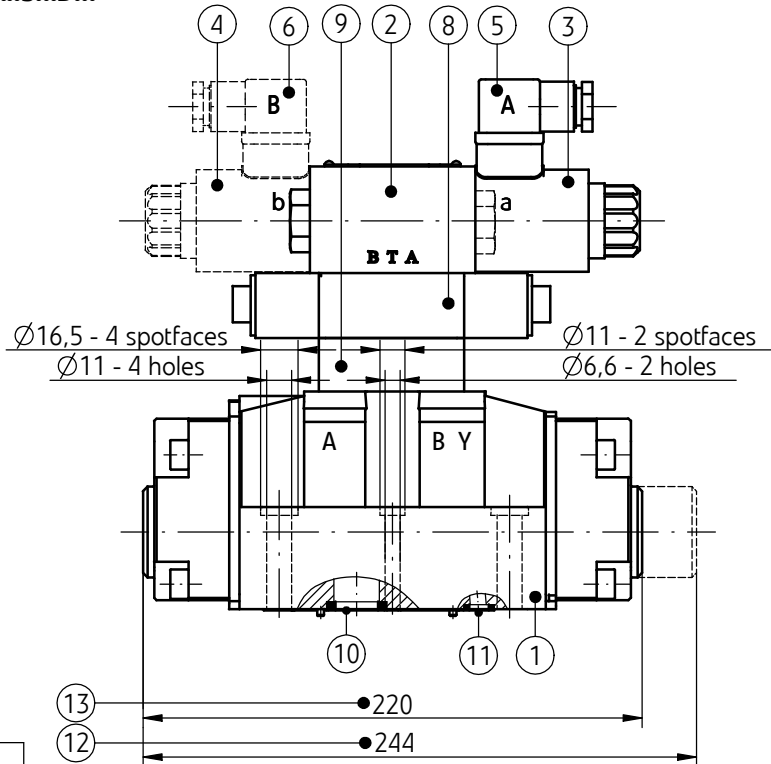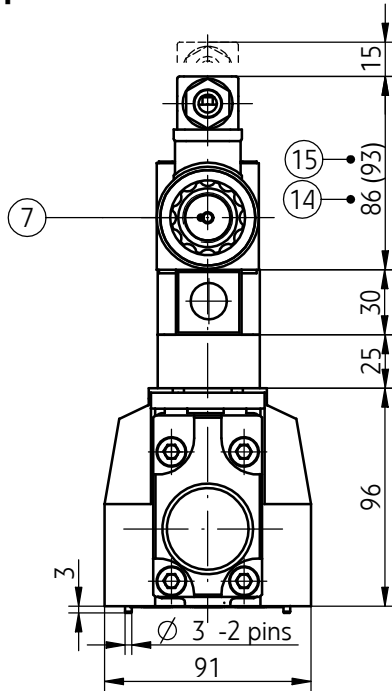

- 1 - 2-position main directional valve (spool schemes: C, D, K, Z - on page 8)
- 2 - 2-position directional valve (pilot valve) type WE6...12/... according to data sheet WK 499 502 (spool types according to technical data on page 4)
- 3 - Solenoid a
- 4 - Solenoid b - only for versions: ...4WEH16...7X/O, ...4WEH16...7X/OF...
- 5 - Plug-in-connector A - ISO 4400 (DIN 43650 - A)
- 6 - Plug-in-connector B - ISO 4400 (DIN 43650 - A) - only for version like item 4:
- 7 - Manual override
- 8 - Pilot choke adjustment (optional accessories)
- 9 - Pressure ratio valve (optional accessories)
- 10 - Square cross-section sealing ring 22,5 x 2,1 - 4 pcs/kit (P,T,A,B)
- 11 - Square cross-section sealing ring 10 x 2 - 3 pcs/kit (X,Y,L)
- 12 - Dimension for directional valve with **spring positioned** spool (version ...4WEH16...7X/...)
- 13 - Dimension for directional valve with **hydraulically positioned** spool (version ...4WEH16H...7X/...)
- 14 - Dimension for electrical connection for DC
- 15 - Dimension for electrical connection for DC
- 16 - Porting pattern - configuration of surface holes in subplate in accordance with the following standards:
 - CETOP RP 121H - identified by CETOP 4.2-4-07 (nominal size CETOP 07)
 - ISO 4401 - identified by ISO 4401-07-06-0-94 mounting bolts in accordance with PN -EN ISO 4762 M10 x 60 - 10.9 - 4 pcs/kit tightening torque $M_d = 62 \text{ Nm}$ M6 x 60 - 10.9 - 2 pcs/kit tightening torque $M_d = 12,5 \text{ Nm}$
- NOTE:**
 - (*) - only for 3-position versions with O (neutral) position of the spool hydraulically centered
- 17 - Subplate surface required

ACCESSORIES FOR STANDARD DIRECTIONAL VALVE

Pilot choke adjustment

versions: ...4WEH16...72/...S...
...4WEH16...72/...S2...

Directional spool valves type ...4WEH16... may be optionally provided with pilot choke adjustment (throttle check valve type Z2FS6... according to data sheet WK 450 232) which allows to adjust switching time of directional spool valve.


The change of adjustment method of switching time (flow throttling):

- on inlet - version ...4WEH16...72/...S...
- on outlet - version ...4WEH16...72/...S2...

is made while mounting by rotating the pilot choke adjustment (3) by 180 degrees around its longitudinal axis.

Rotation of the adjusting screw (5) clockwise increases and counterclockwise decreases switching time of the valve.

The pilot choke adjustment (3) is fixed by means of bolts **M5 x 80 - 10.9** - 4 pcs/kit in accordance with **PN - EN ISO 4762** with tightening torque of **Md = 5 Nm**.

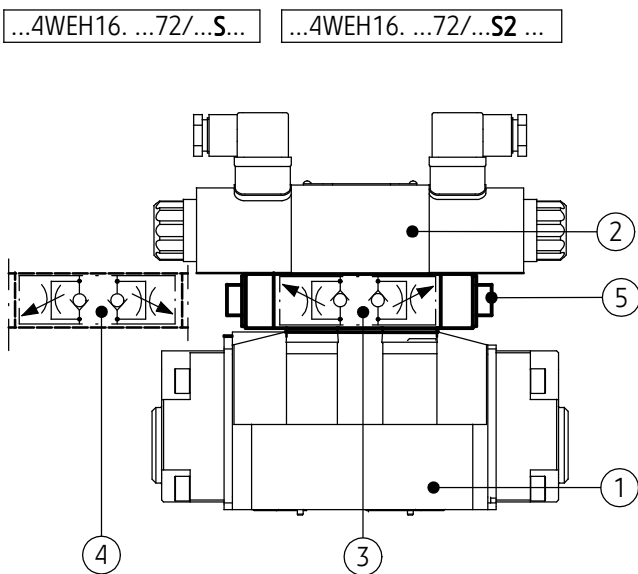


- 1 - Main valve
- 2 - Pilot valve
- 3 - Pilot choke adjustment with adjustment of switching time on outlet
- 4 - Assembly method of pilot choke adjustment with adjustment of switching time on inlet
- 5 - Adjusting screw
- 6 - Pressure ratio valve

Pressure ratio valve

versions: H- 4WEH16...72/...ET...D1...
H- 4WEH16...72/...E...D1...

When pilot pressure exceeds 25 MPa, the directional valves type ...WEH16... must be equipped with pressure ratio valve (6). It causes the pilot pressure is reduced in the ratio 1: 0,66 = 1,515. Directional valves in the following versions: **H - 4WEH16.../...ET...;** **H - 4WEH16.../...E...;** are provided with the pressure ratio valve (6). The pressure ratio valve (6) and pilot choke adjustment (3) must be fixed by means of bolts **M5 x 105 - 10.9** - 4 pcs/kit in accordance with **PN - EN ISO 4762** with tightening torque of **Md = 5 Nm**.

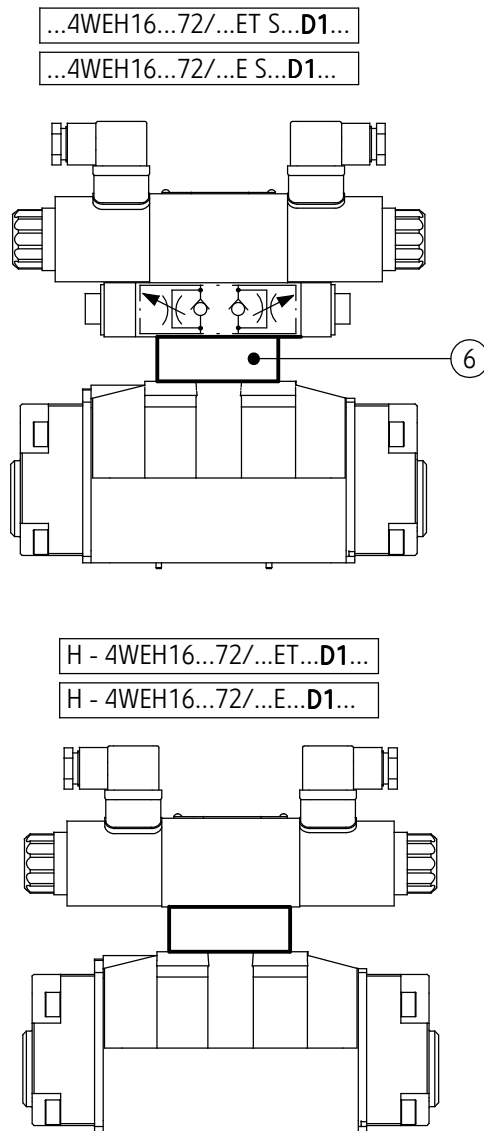

ACCESSORIES FOR STANDARD DIRECTIONAL VALVE

Pre-load valve

versions: ...4WEH16...72/...P4,5...
...4WEH16...72/...P7...

Directional valves type ...WEH16... with internal pilot oil supply (Y) – versions: ...4WEH16...72/...E ...4WEH16...72/...ET... with spools with pressureless circulation of hydraulic fluid **must be equipped with the pre-load valve (2) fixed in port P of the main valve (1).**


Cracking pressure for pre-load valves:

valve P 4,5 - 0,45 MPa

valve P 7 - 0,7 MPa

For directional valves with fixed pressure ratio valve – versions: ...4WEH16...72/...D...the pre-load valve P7 must be applied.



...4WEH16...72/...P...

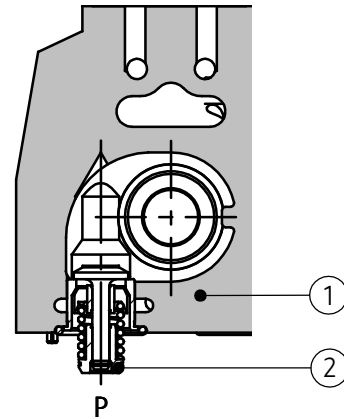

- 1 - Main valve body
- 2 - Pre-load valve

Performance curves for pre-load valves


measured at viscosity $\nu = 41 \text{ mm}^2/\text{s}$ and temperature $t = 50^\circ\text{C}$

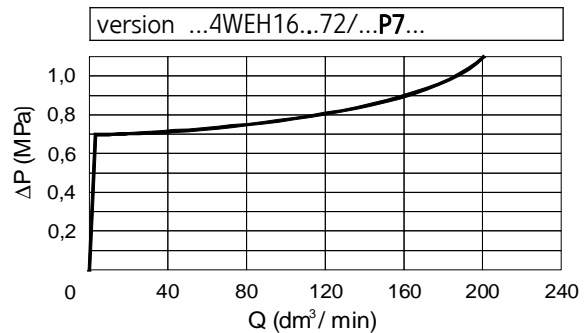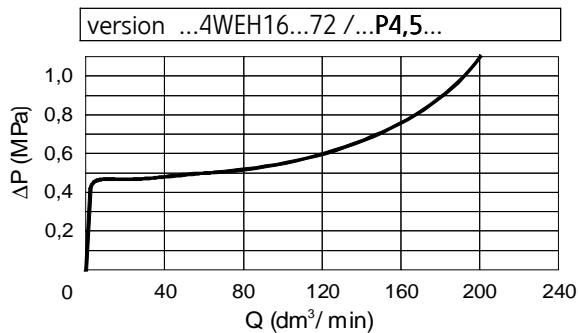

Throttle insert

versions ...4WEH16...72/...B...

Directional valves type ...WEH16... may be equipped with throttle insert (3) in port P in pilot valve (2) which allows to **delay switching time** of the main valve.

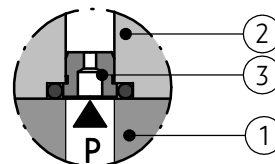

- 1 - Main valve body
- 2 - Pilot valve body
- 3 - Throttle insert

ACCESSORIES FOR STANDARD DIRECTIONAL VALVE

Pilot oil supply and pilot oil drain

Pilot oil supply **X – external**
 pilot oil drain **Y – external**
 version ...4WEH16...72/...

In version...4WEH16...72/... the hole screw plugs (3) and (5) and plugs (4) and (6) must be mounted in the position like given on the drawing.

Pilot oil supply **X – internal**
 pilot oil drain **Y – external**
 version ...4WEH16...72/...E...

In version ...4WEH16...72/...E... the hole screw plug (3) must be dismantled whereas the hole screw plug (5), plugs (4) and (6) must be mounted and port **X** in a subplate should be plugged.

Pilot oil supply **X – internal**
 pilot oil drain **Y – internal**
 version ...4WEH16...72/...ET...

In version ...4WEH16...72/...ET... the hole screw plugs (3) and (5) must be dismantled whereas the plugs (4) and (6) must be mounted and ports **X** and **Y** in a subplate must be plugged.

Pilot oil supply **X – external**
 pilot oil drain **Y – internal**
 version ...4WEH16...72/...T...

In version ...4WEH16...72/...T... the hole screw plug (3) must be mounted whereas the hole screw plug (5) must be dismantled. The plugs (4) and (6) must be mounted and the port **Y** in a subplate must be plugged.


NOTES:

Versions with internal oil drain:...ET...; ...T... are non-applicable for directional valves with main spool hydraulically centered (versions...4WEH16H...).


The hole screw plug (3) in port **X** is accessible after screwing out a side cover (2) in the main valve (1).

The hole screw plug (5) in port **Y** is accessible after dismantling the pilot valve (7).

...4WEH16...72/...

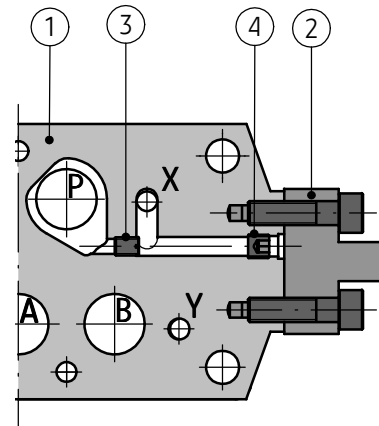

...4WEH16...72/...

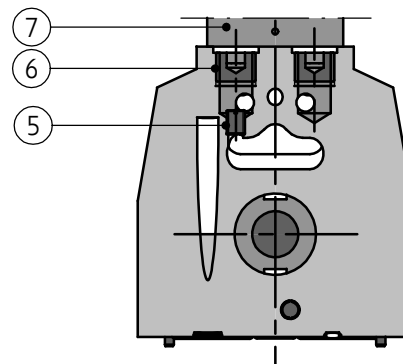

- 1 - Main valve body
- 2 - Side cover
- 3 - Hole screw plug **M6 - 8,8** (S3)
- 4 - Plug
- 5 - Hole screw plug **M6 - 8,8** (S3)
- 6 - Plug
- 7 - Pilot valve body


OPTIONAL ACCESSORIES FOR DIRECTIONAL VALVE

Stroke limiter

Stroke limiter of the spool may be mounted:

- stroke limiter on valve ends **A** and **B**
version ...4WEH16...72/...10...
- stroke limiter on valve end **A**
version ...4WEH16...72/...11...
- stroke limiter on valve end **B**
version ...4WEH16...72/...12...

Adjustment of the stroke of the main spool is by rotating the pin (3) and securing with locknut (4). Rotating the pin (3) clockwise reduces the stroke of the main spool (2). While adjusting the stroke the control chamber must be at zero pressure.

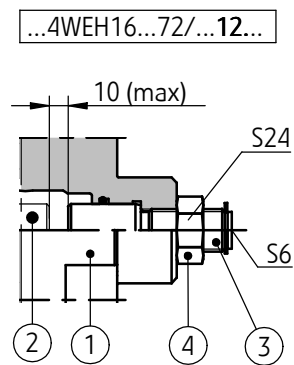

- 1 - Stroke limiter body (on valve end B)
- 2 - Spool of the main valve
- 3 - Pin
- 4 - Locknut

End position monitor

End position monitor may be mounted:

- on valve end **A**
versions: ...4WEH16...72/...18... (contact breaker)
...4WEH16...72/...22... (contact maker)
- on valve end **B**
versions: ...4WEH16...72/...19... (contact breaker)
...4WEH16...72/...23... (contact maker)

Directional valves type WEH16...72/... may be equipped with spool end position monitor, optionally contact maker or contact breaker, mounted depending on the version, in main valve cover on valve end **A** or **B** - overall dimensions on pages 16 - 19.


Detailed information concerning proximity sensors and plug-in connectors given on page 4.

signal level	end position monitor with contact breakers (versions 4WEH16.../...18...; ...19...)			end position monitor with contact makers (versions 4WEH16.../...22...; ...23...)		
	spool position			spool position		
	valve body side	central	cover side	valve body side	central	cover side
sensor ① valve body side	0	1	1	1	0	0
sensor ② cover side	1	1	0	0	0	1

OPTIONAL ACCESSORIES FOR DIRECTIONAL VALVE


End position monitor

...4WEH16...72/...19...

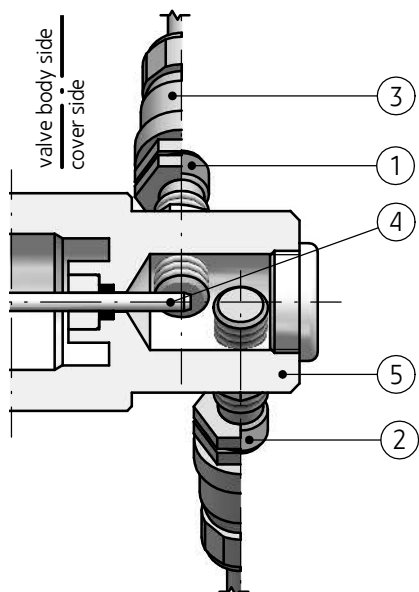


- 1 - Inductive sensor contact maker **PNP NO** according to page 4
- 2 - Inductive sensor contact breaker **PNP NC** according to page 4
- 3 - Plug-in cable connector (straight, female plug-in connectors - according to page 4, 2 pcs delivered with the valve
- 4 - Mandrel of the main spool
- 5 - Sensors cover

...4WEH16...72/...23...

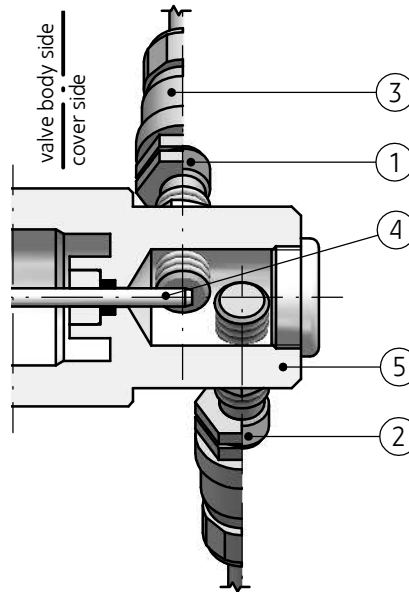


- 1 - Inductive sensor contact breaker **PNP NC** according to page 4
- 2 - Inductive sensor contact maker **PNP NO** according to page 4
- 3 - Plug-in cable connector (straight, female plug-in connectors - according to page 4, 2 pcs delivered with the valve
- 4 - Mandrel of the main spool
- 5 - Sensors cover

scheme of electrical connection of sensors set contact breaker

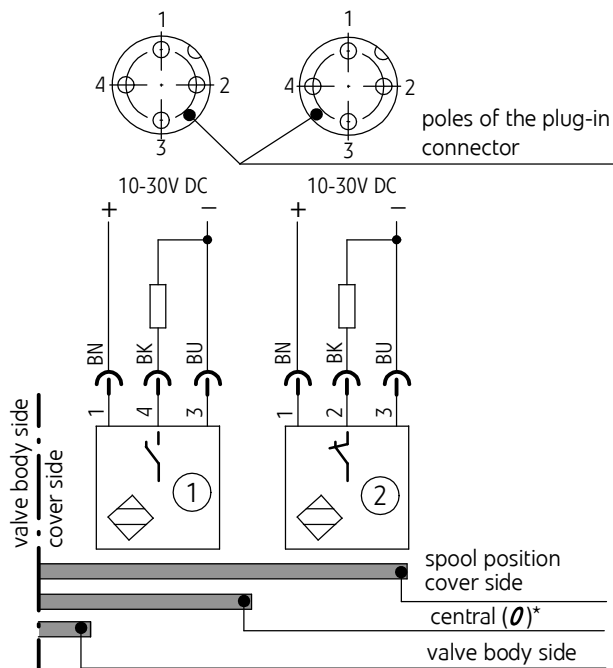

NOTE:
(*) - Only for 3-position directional valves

scheme of electrical connection of sensors set contact maker

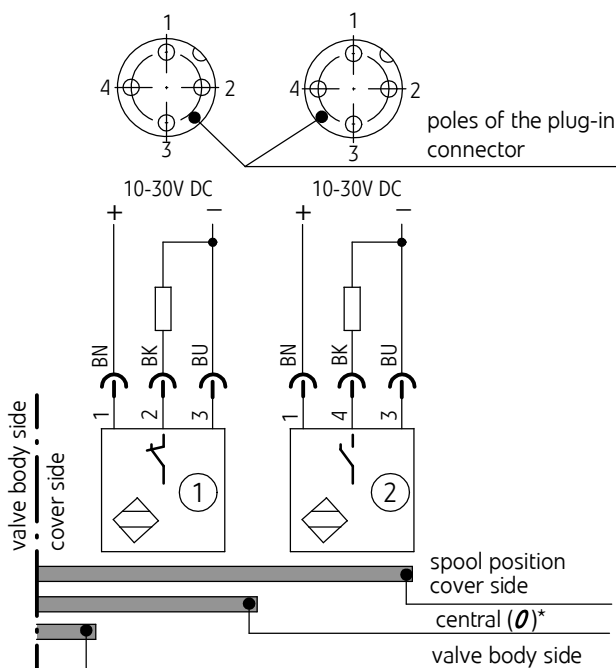

NOTE:
(*) - Only for 3-position directional valves


OVERALL DIMENSIONS OF DIRECTIONAL VALVE WITH OPTIONAL ACCESSORIES

Versions with stroke limiter

3-position directional valves with the main spool spring centered

Stroke limiter may be mounted:

- on valve end **A** - version ...4WH16...72/...11...
- on valve end **B** - version ...4WH16...72/...12...
- on valve ends **A** and **B** - version ...4WH16...72/...10...

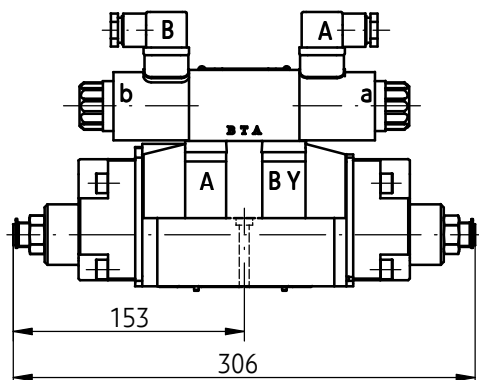


...4WEH16...72/...10...

2-position directional valves with the main spool hydraulically positioned

Stroke limiter may be mounted:

- on valve end **A** - version ...4WEH16H...72/...11...
- on valve end **B** - version ...4WEH16H...72/...12...
- on valve end **A** and **B** - version ...4WEH16H...72/...10...

2 solenoids (a, b) only for versions
4 WEH16H...72/O...; OF...

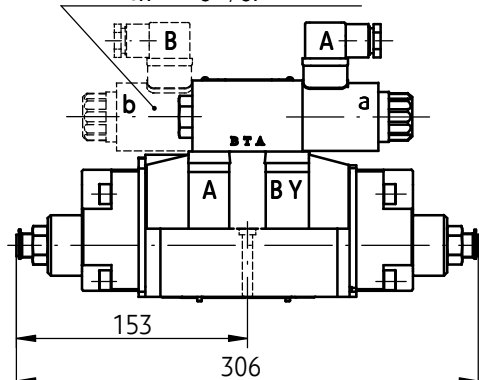


...4WEH16H...72/...10...

3-position directional valves with the main spool hydraulically centered

Stroke limiter may be mounted:

- on valve end **B** - version ...4WEH16H...72/...12...

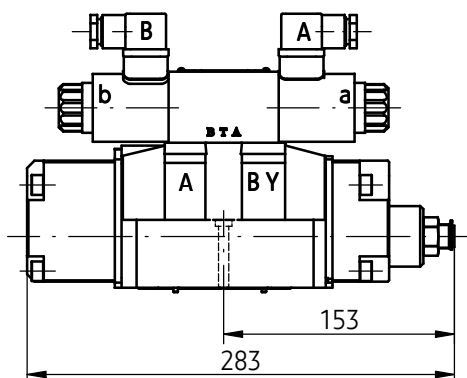


...4WEH16H...72/...12...

2-position directional valves with the main spool spring positioned

Stroke limiter may be mounted:

- on valve end **A** - version ...4WEH16...72/...11...

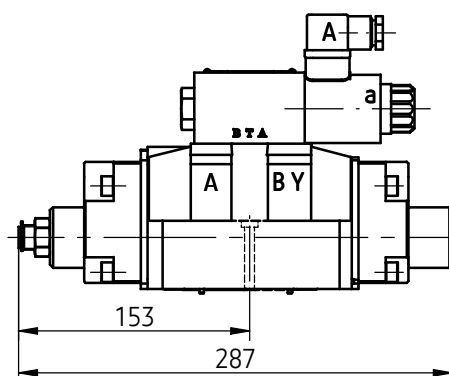

...4WEH16...72/...11...



OVERALL DIMENSIONS OF DIRECTIONAL VALVE WITH OPTIONAL ACCESSORIES

Versions with end position monitor

3-position directional valves with spring centered main spool

end position monitor may be mounted:

- on valve end **A**
versions: ...4WEH16...72/...18... (contact breaker) ; ...22... (contact maker)
- on valve end **B**
versions: ...4WEH16...72/...19... (contact breaker) ; ...23... (contact maker)

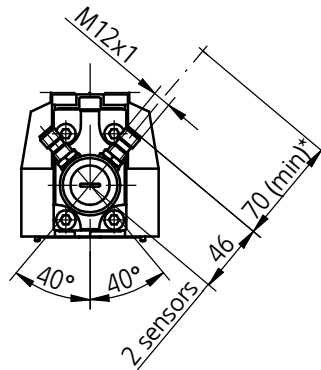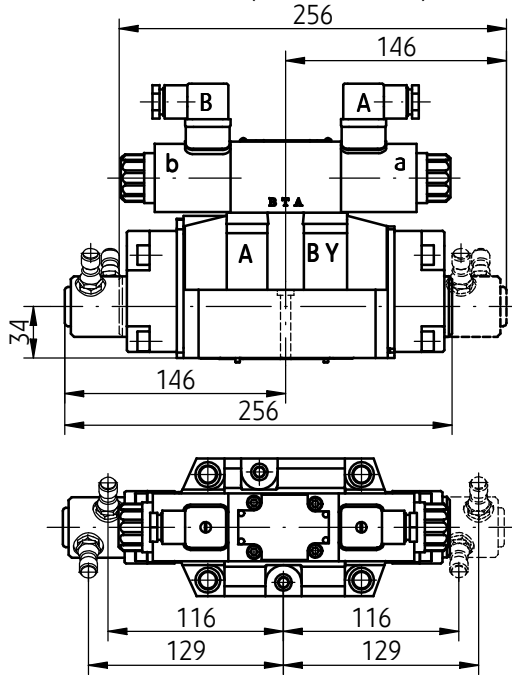

...4WEH16...72/...18...

...4WEH16...72/...19...

...4WEH16...72/...22...

...4WEH16...72/...23...


NOTE:

(*) - Distance for mounting plug-in connector and cable of sensor (plug-in connectors according to page 4 -2 pcs not shown on drawing, delivered with the valve)

3-position directional valves with hydraulically centered main spool


end position monitor may be mounted:

- on valve end **B** - versions: ...4WEH16H...72/...19... (contact breaker)
...4WEH16H...72/...23... (contact maker)

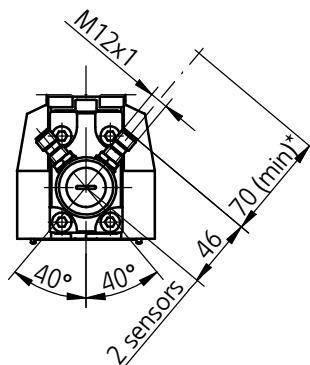

...4WEH16H...72/...19...

...4WEH16H...72/...23...

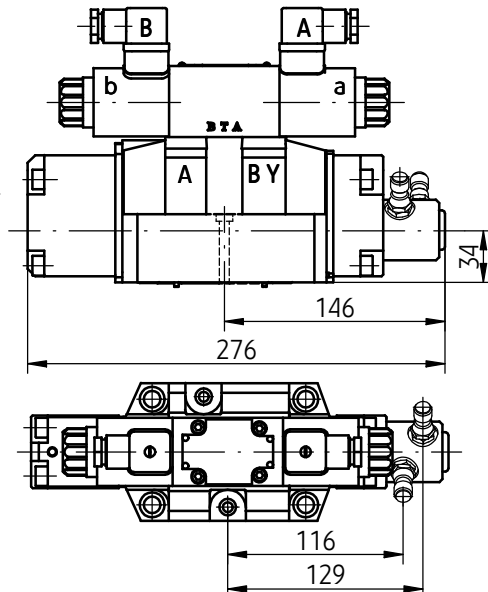

NOTE:

(*) - Distance for mounting plug-in connector and cable of sensor (plug-in connectors according to page 4 -2 pcs not shown on drawing, delivered with the valve)



OVERALL DIMENSIONS OF DIRECTIONAL VALVE WITH OPTIONAL ACCESSORIES

Versions with end position monitor

2-position directional valves with spring positioned main spool

end position monitor may be mounted:

- on valve end **A**
versions: ...4WEH16...72/...18... (contact breaker)
...4WEH16...72/...22... (contact maker)

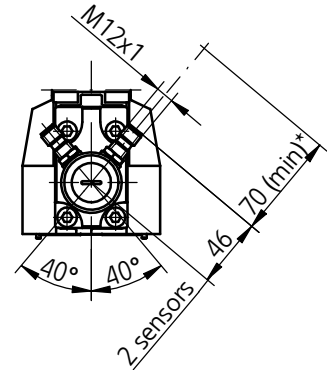
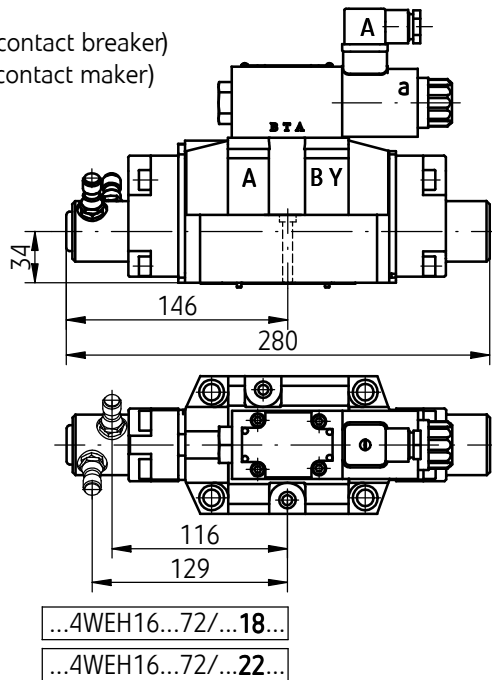


2-position directional valves with hydraulically positioned main spool

end position monitor may be mounted:

- on valve end **A**
versions: ...4WEH16H...72/...18... (contact breaker) ; ...22... (contact maker)
- on valve end **B**
versions: ...4WEH16H...72/...19... (contact breaker) ; ...23... (contact maker)

2 solenoids (a, b) only for versions
4WEH16H...72/O...;...OF...

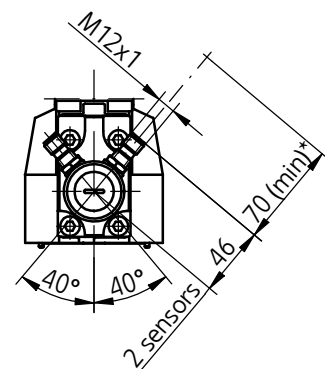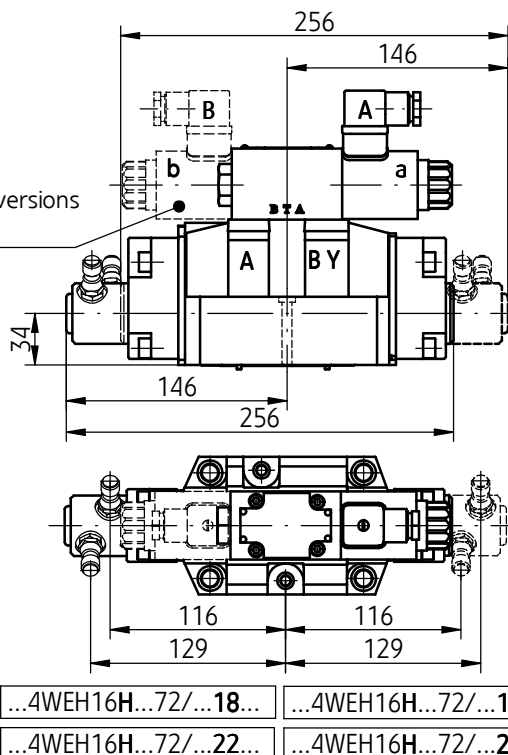

NOTE:

(*) - Distance for mounting plug-in connector and cable of sensor (plug-in connectors according to page 4 - 2 pcs not shown on drawing, delivered with the valve)


OVERALL DIMENSIONS OF DIRECTIONAL VALVE WITH OPTIONAL ACCESSORIES

Versions with stroke limiter and end position monitor

3-position directional valves with spring centered main spool

Stroke limiter and end position monitor may be mounted:

- stroke limiter on valve end **A** and end position monitor **contact breaker** on valve end **B** - version ...4WH16...72/...20...
- stroke limiter on valve end **A** and end position monitor **contact maker** on valve end **B** - version ...4WH16...72/...24...
- stroke limiter on valve end **B** and end position monitor **contact breaker** on valve end **A** - version ...4WH16...72/...21...
- stroke limiter on valve end **B** and end position monitor **contact maker** on valve end **A** - version ...4WH16...72/...25...

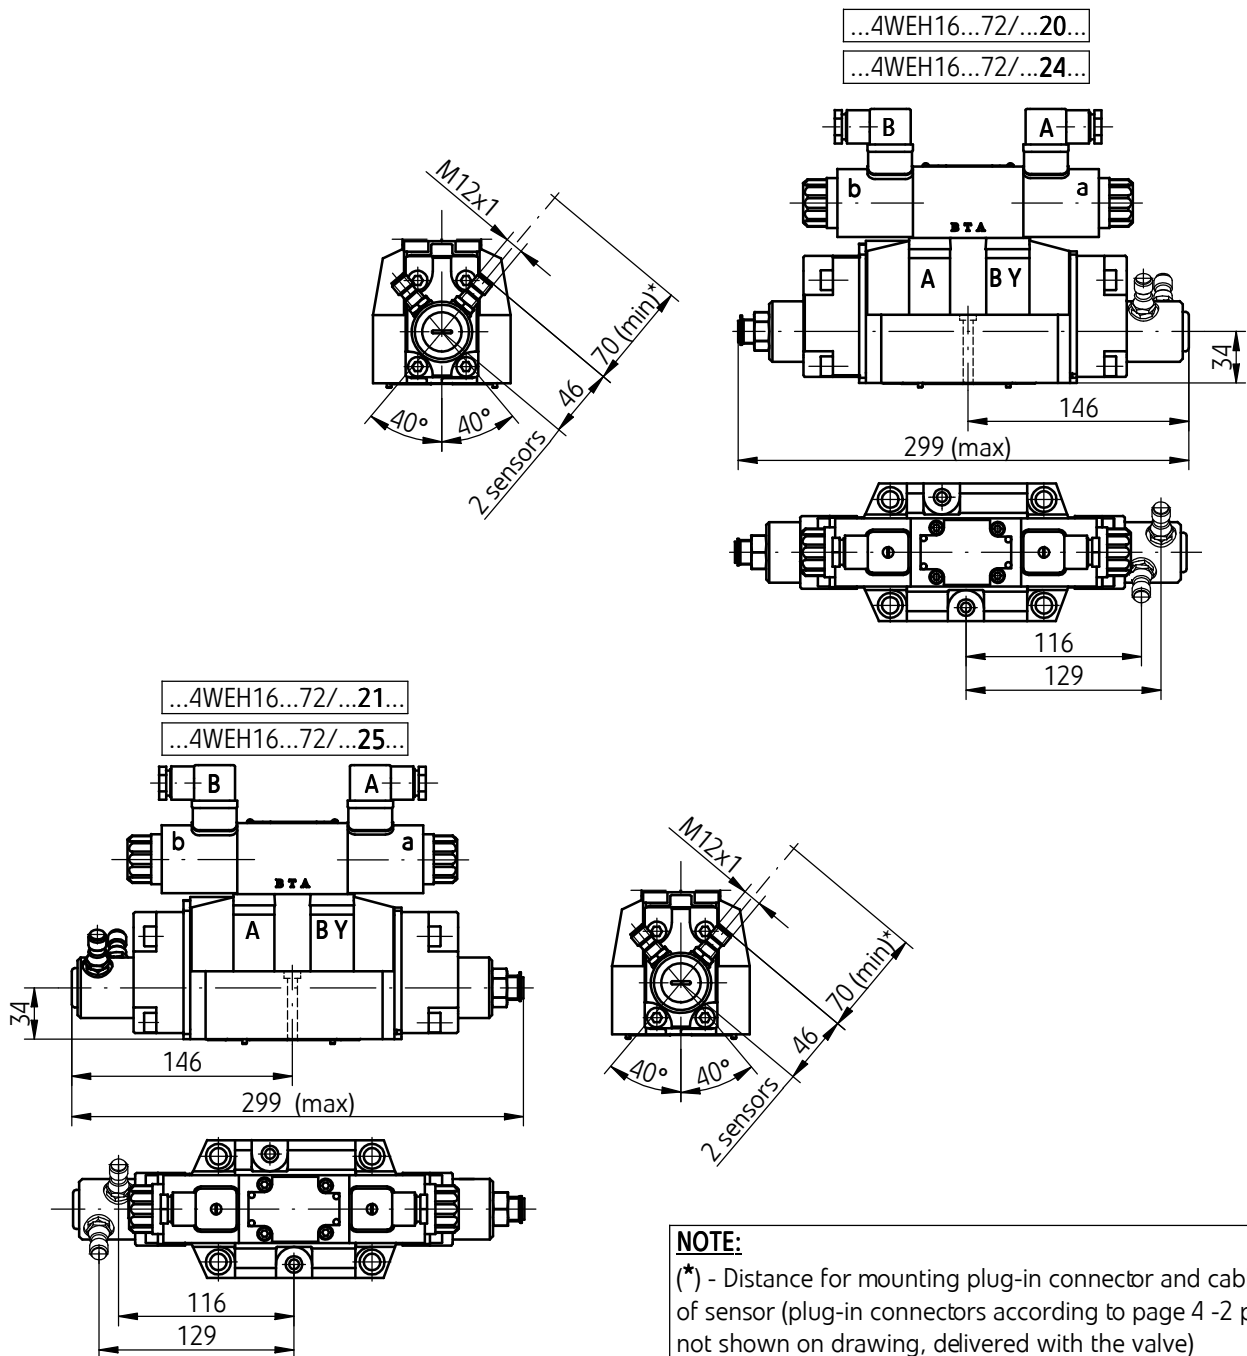

OVERALL DIMENSIONS OF DIRECTIONAL VALVE WITH OPTIONAL ACCESSORIES

Versions with stroke limiter and end position monitor

2-position directional valves with hydraulically positioned main spool




Stroke limiter and end position monitor may be mounted:

- stroke limiter on valve end **A** and end position monitor **contact breaker** on valve end **B** - version ...4WH16...72/...20...
- stroke limiter on valve end **A** and end position monitor **contact maker** on valve end **B** - version ...4WH16...72/...24...
- stroke limiter on valve end **B** and end position monitor **contact breaker** on valve end **A** - version ...4WH16...72/...21...
- stroke limiter on valve end **B** and end position monitor **contact maker** on valve end **A** - version ...4WH16...72/...25...

...4WEH16...72/...20...

...4WEH16...72/...24...




2 solenoids (a, b) only for versions 4WEH16H...72/O...;...OF...

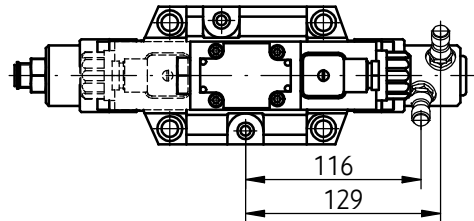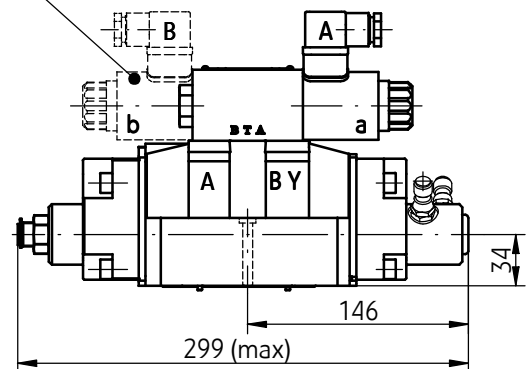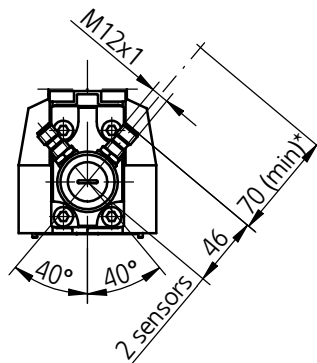

...4WEH16...72/...21...

...4WEH16...72/...25...

2 solenoids (a, b) only for versions 4WEH16H...72/O...;...OF...

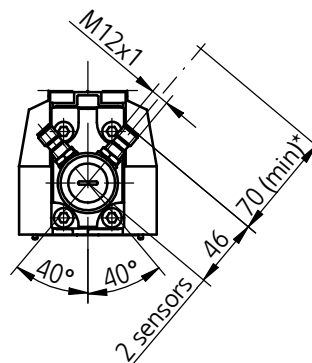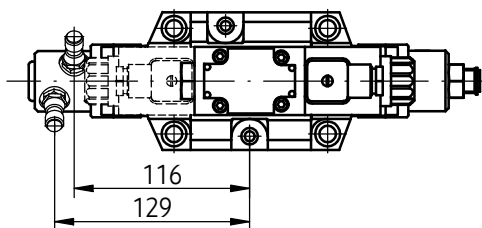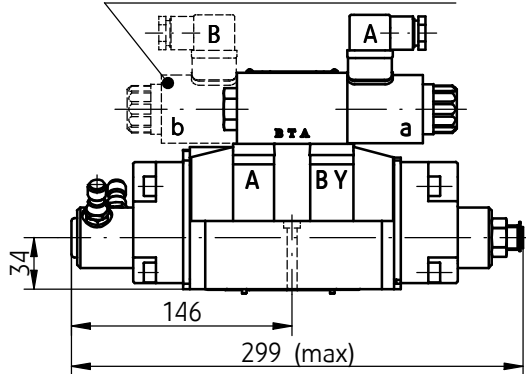

NOTE:

(*) - Distance for mounting plug-in connector and cable of sensor (plug-in connectors according to page 4 -2 pcs not shown on drawing, delivered with the valve)


PERFORMANCE CURVES

measured at viscosity $\nu = 41 \text{ mm}^2/\text{s}$ and temperature $t = 50^\circ\text{C}$

Pressure resistance curves


Performance curves $\Delta p(Q)$ for directional valves type 4WEH16... with spools **E** and **R**

- 1 - spools: **E, R**
- 2 - spool **R**- flow direction **P→A** and **B→A**

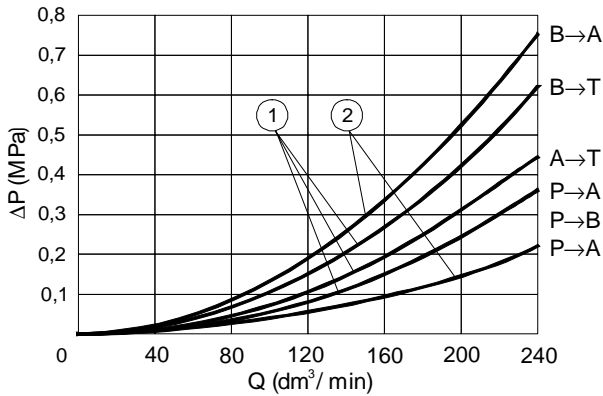


Performance curves $\Delta p(Q)$ for directional valves type 4WEH16... with spools: **F, H, J, L, M, Q, S, U, V, W, C, D, K, Z**

- 1 - spool **S**
- 2 - spools: **F, H, J, L, M, Q, U, V, W, C, D, K, Z**

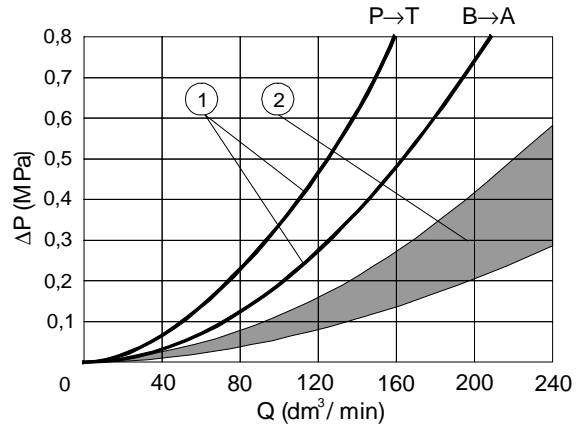

Performance curves $\Delta p(Q)$ for directional valves type 4WEH16... with spools **G** and **T**

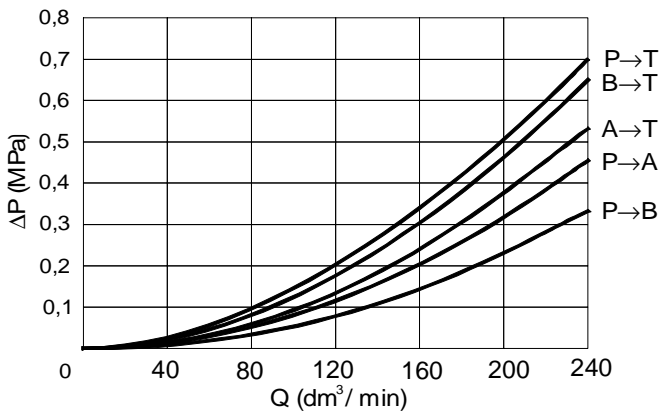

Flow limits

spool type	pressure p [MPa]				
	7	14	21	28	35
	flow rate Q [dm ³ /min]				
E, J, L, M, Q, R, U, V, W, C, D, K, Z	240	240	205	180	170
F	200	145	115	100	90
G, H, S, T	220	160	130	110	100

NOTE:

Above flow limits are related to standard application of 4-way directional control valve using two flow directions, e.g. **P** to **A** and simultaneously **B** to **T**. When 4-way directional control valve with only one flow direction is used, e.g. **P** to **A** (**B** plugged) or **A** to **T** (**B** plugged), then the actual flow limits are considerably lower.

HOW TO ORDER

+	4	WEH				/							
---	---	-----	--	--	--	---	--	--	--	--	--	--	--

Version

working pressure
up to 28 MPa = no designation
 working pressure
up to 35 MPa = H

Number of service ports

4-way = 4

Nominal size (NS)

NS16 = 16

Centering/ spool positioning of the main valve

spring centering = no designation
 hydraulic off -set = H

Type of the main spool

spool schemes - according to **page 8**

Series number

(70-79) - installation and connection dimensions unchanged = 7X
series 72 = 72

Centering/positioning of spool of the pilot valve

(applicable only to 2-position valves WEH16HC... / ...HD... / ...HK... / ...HZ...)

by means of spring (solenoid a) = no designation
 without spring (solenoid a and b) = 0
 without spring, with detent (solenoid a and b) = OF

Supply voltage for solenoids at pilot valve

12 V DC = G 12
24 V DC = **G 24**
 110 V DC = G 110
 110 V AC 50 Hz (plug-in-connector with rectifier) = W 110 R
230 V AC 50 Hz (plug-in-connector with rectifier) = **W 230 R**

Manual override

solenoids without manual override = no designation
solenoids with manual override = **N**

Pilot oil supply and pilot oil drain

external pilot oil supply, external pilot oil drain = no designation
 internal pilot oil supply, external pilot oil drain = E
 internal pilot oil supply, internal pilot oil drain = ET
 external pilot oil supply, internal pilot oil drain = T

Switching time adjustment

without switching time adjustment = no designation
 switching time adjustment as meter-in control = S
 switching time adjustment as meter-out control = S2

HOW TO ORDER

+					★
---	--	--	--	--	---

Further requirements in clear text
(to be agreed with the manufacturer)

Sealing

NBR (for fluids on mineral oil base) = **no designation**
FKM (for fluids on phosphate ester base) = V

Pressure ratio valve

without pressure ratio valve = **no designation**
with pressure ratio valve = D1

Pre-load valve

without pre-load valve = **no designation**
pre-load valve with cracking pressure 0,45 MPa = P 4,5
pre-load valve with cracking pressure 0,7 MPa = P 7

Throttle insert in port P of the pilot valve

without throttle insert = **no designation**
throttle insert ϕ 0,8 = B 08
throttle insert ϕ 1,0 = B 10
throttle insert ϕ 1,2 = B 12

Accessories

without accessories = **no designation**
stroke limiter on valve ends **A** and **B** = 10
stroke limiter on valve end **A** = 11
stroke limiter on valve end **B** = 12
end position monitor contact breaker on valve end **A** = 18
end position monitor contact breaker on valve end **B**
(not applicable for 2-position valves with spring positioning) = 19
stroke limiter on valve end **A** and end position monitor contact breaker on valve end **B** = 20
stroke limiter on valve end **B** and end position monitor contact breaker on valve end **A** = 21
end position monitor contact maker on valve end **A** = 22
end position monitor contact maker on valve end **B**
(not applicable for 2-position valves with spring positioning) = 23
stroke limiter on valve end **A** and end position monitor contact maker on valve end **B** = 24
stroke limiter on valve end **B** and end position monitor contact maker on valve end **A** = 25

Electrical connection

plug-in-connector ISO 4400 type without LED = **Z4**
plug-in-connector ISO 4400 type with LED = Z4L


NOTES:

The directional spool valve should be ordered according to the above coding.

The symbols in bold are preferred versions in short delivery time.

Coding example: H- 4 WEH16 E 72/G24 N ET Z4

EXAMPLE OF APPLICATION IN HYDRAULIC SYSTEM

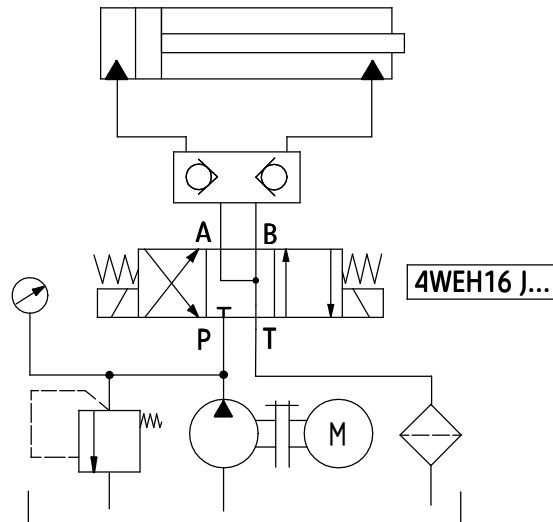

SUBPLATES AND MOUNTING BOLTS

Subplates must be ordered according to data sheet
WK 450 788. Subplate types:

G174/01 - threaded connections	P, T, A, B - G 1
	X, Y, L - G1/4
G174/02 - threaded connections	P, T, A, B - M33 x 2
	X, Y, L - M14 x 1,5
G172/01 - threaded connections	P, T, A, B - G3/4
	X, Y, L - G1/4
G172/02 - threaded connections	P, T, A, B - M27 x 2
	X, Y, L - M14 x 1,5

Subplates and bolts for mounting directional spool valve
in accordance with **PN - EN ISO 4762**:

M10 x 60 -10,9 - 4 pcs/kit

M 6 x 60 -10.9 - 2 pcs/kit

must be ordered separately.

Tightening torques for bolts:

M10 x 60 - **Md = 62 Nm**

M 6 x 60 - **Md = 12,5 Nm**

NOTE:

Subplate symbols in bold are preferred versions in short delivery time.

PONAR Wadowice S.A.
ul. Wojska Polskiego 29
34-100 Wadowice
tel. +48 33 488 21 00
fax. +48 33 488 21 03
www.ponar-wadowice.pl

